


Attention!

BEFORE UNCRATING

The brake **MUST** be disengaged to remove machine from shipping crate or damage may result.

To disengage brake, insert a small standard screwdriver between electronic brake lever and hub as shown.

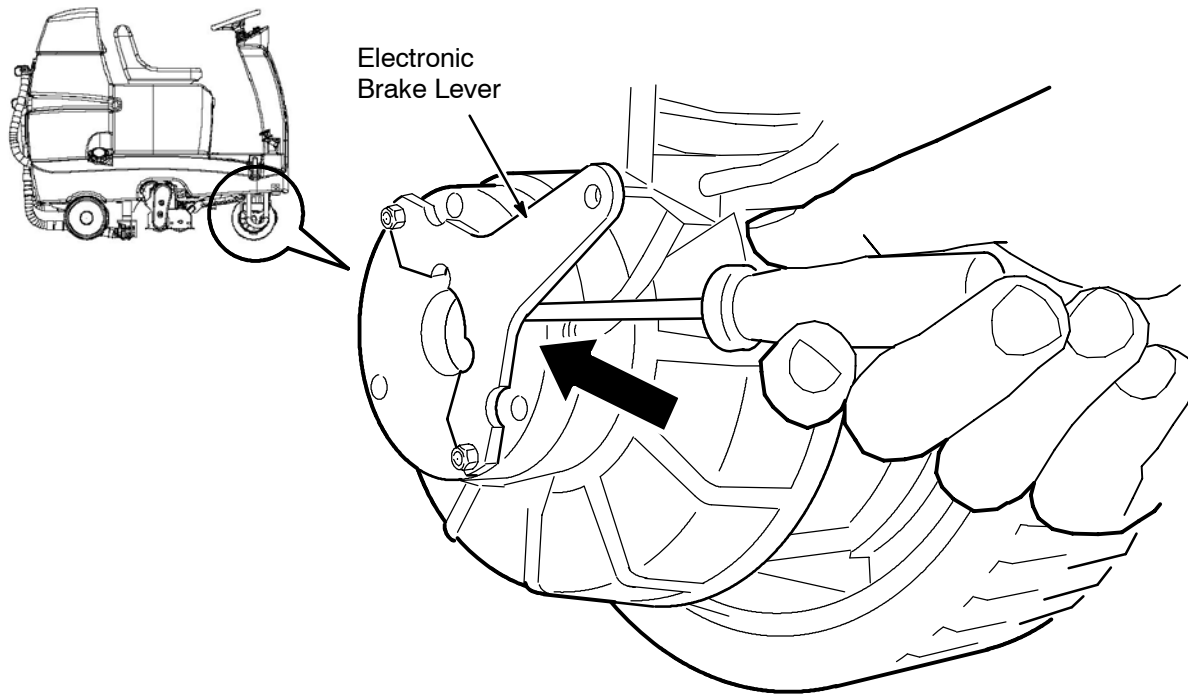

FOR SAFETY: After removing machine from crate, immediately remove screwdriver. Do not push, tow or park machine on an incline or operate machine when brake is disengaged.