



Models: T500, T500e

# Parking Brake Kit




## INSTALLATION INSTRUCTIONS:

Installation Time: .5 Hours

Tools Required: 10 mm wrench, Philips Screwdriver

**FOR SAFETY:** Before installing kit, park machine on a level surface and remove key .

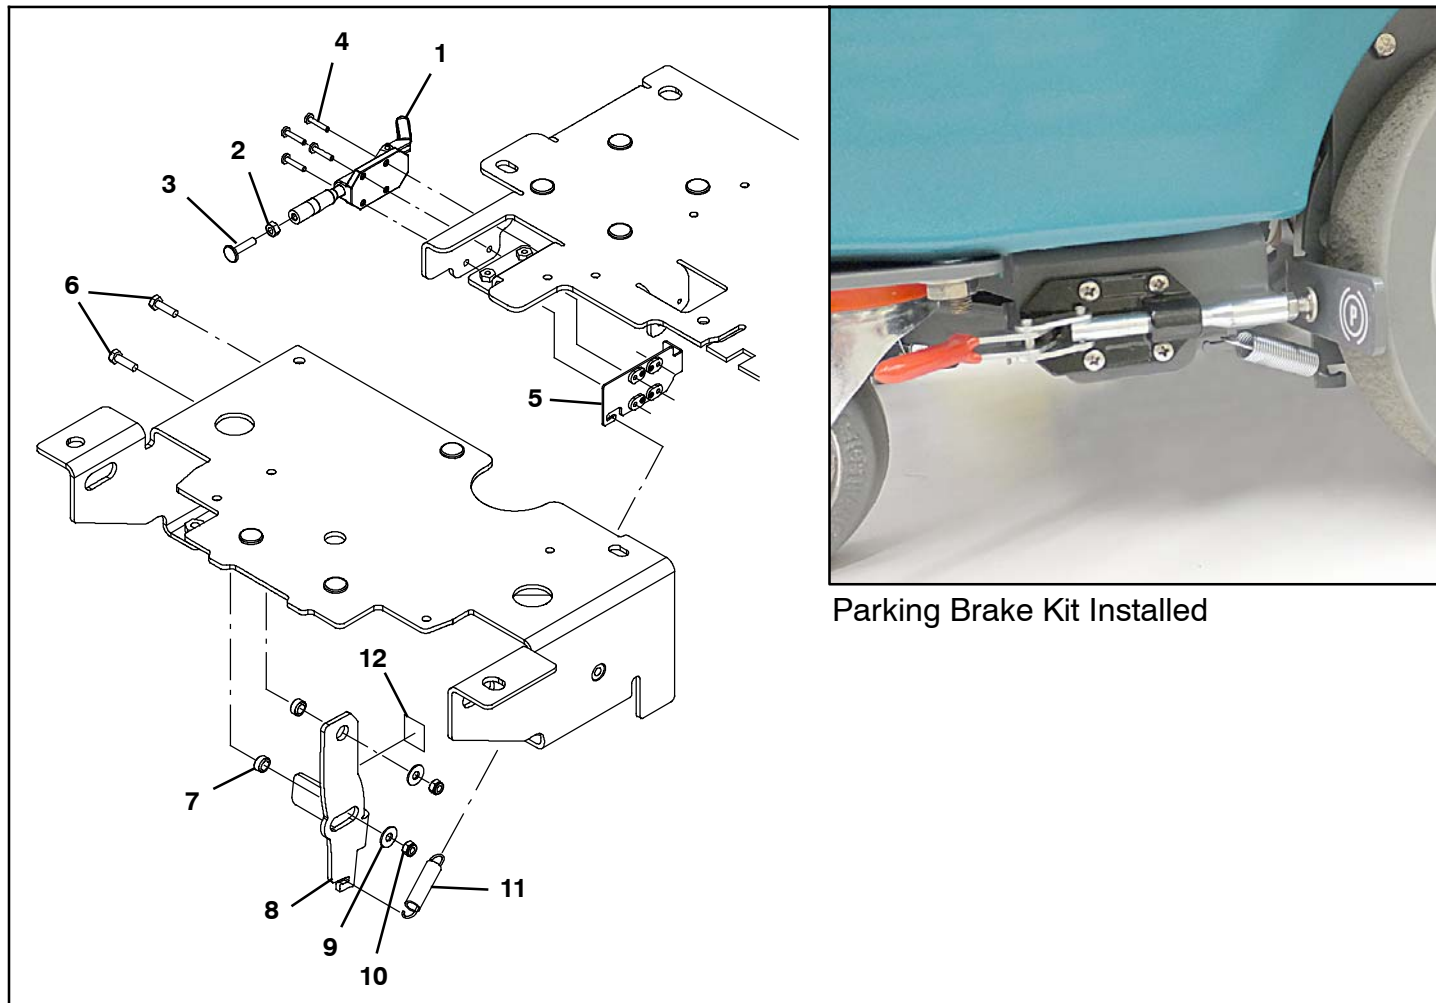

Parking Brake Kit Installed

## PARKING BRAKE KIT PARTS LIST

| Ref. | Part No. | Description                           | Qty. |
|------|----------|---------------------------------------|------|
| 1    | 1221694  | Clamp, Brake, Parking [T500]          | 1    |
| 2    | 07785    | Nut, Hex, Std, M6 X 1.00, Ss          | 1    |
| 3    | 1017416  | Screw, Weld, M6 X 1.00 X 25, Thru, Ss | 1    |
| 4    | 12323    | Screw, Pan, Phl, M4 X 0.70 X 20, Ss   | 4    |
| 5    | 1221695  | Plate Wldt, Brake [T500]              | 1    |
| 6    | 08716    | Screw, Hex, M6 X 1.00 X 20, Ss        | 2    |
| 7    | 360801   | Sleeve, 0.32b 0.50d 0.3l, 2cham, Ss   | 2    |
| 8    | 1221423  | Shoe, Brake, Parking                  | 1    |
| 9    | 01684    | Washer, Flat, 0.27b 0.69d .05, Ss     | 2    |
| 10   | 08712    | Nut, Hex, Lock, M6 X 1.00, NI, Ss     | 2    |
| 11   | 75575    | Spring, Extn, 0.50od 0.06wir 02.5l    | 1    |
| 12   | 1224990  | Label, Opertnl, Parking Brake         | 1    |